

# MOTHERNATURE CO2 GENERATOR

Increase carbon dioxide concentration in your growing environment to **more than double the normal PPM** with the MotherNature CO2 Generator.

Designed to operate in **sealed grow room spaces such as greenhouses or horticultural tents**, the CO2 Generator is **ideal for fast-growing, carbon dioxide-hungry crops**. Plants grown in a concentrated CO2 environment are proven to grow faster, thrive in higher temperatures, and bear bigger, better fruits and flowers.

## HOW TO ACTIVATE

Add **hot (not boiling) water** to the contents of the Generator bucket at **one** of the following amounts (choose amount according to the size of your Generator):

**5L (1.35 gal) CO2 Generator** - add 1.25L (0.33 gal) of hot water to the CO2 Generator bucket

**10L (2.7 gal) CO2 Generator** - add 2.5L (0.66 gal) of hot water to the CO2 Generator bucket

Allow **24hrs before you use the CO2 Generator**. This 24hr period is essential in order for the contents to properly activate.

## DIRECTIONS FOR USE

**All Users** - Connect a single outlet **air pump (if not supplied)** to the bottom pipe on the **MotherNature CO2 Generator**, then plug the pump into a timer or lighting relay so that the **MotherNature CO2 Generator** only operates during the daylight period. Route the upper pipe connected to the **MotherNature CO2 Generator** into the back of a circulation fan so that the **CO2** is distributed evenly throughout the growing environment.

**Enhanced Setup 1 (Intermediate)** - Use your timer to pulse the **MotherNature CO2 Generator** during the daylight period so that it operates for 5-10 minutes and then turns off for 60 minutes. This schedule can be repeated during the daylight period so that every hour high concentrations of **CO2** are injected into the growing environment. During the dark period your timer should be set to shut the CO2 Generator to 'off'. **This Setup is highly recommended.**

**Enhanced Setup 2 (Advanced)** - Connect your timer and **MotherNature CO2 Generator** to a **CO2** sensor and set the parameters so that the **CO2** sensor will only turn on the **MotherNature CO2 Generator** when the **CO2** levels drop below your set parameters, we recommend that you set the sensor to activate when **CO2** levels drop below **650 PPM**.

## IMPORTANT

- The MotherNature CO2 Generator pump size should not exceed 1.3-1.5L per minute
- The CO2 Generator should be plugged into a lighting timer/relay and should only pump CO2 when your plants need it, during the 'daylight period'.
- Whilst switched off during 'dark periods' the active CO2 producing bacteria come to life, re-energising the CO2 Generator
- The bacteria are most active and create the most CO2 at temperatures of 22 degrees Celsius / 71.5 degrees Fahrenheit
- Higher levels of CO2 should not be inhaled for long periods of time

MOTHERNATURE

