


## Simple care guidelines

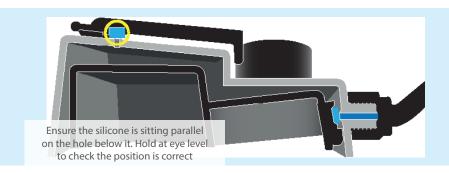

### Ensuring that the AQUAvalve5 floods and drains correctly

- Making sure your AQUAvalve5 floods and drains correctly is simply achieved and only takes a few seconds.
- 2 Hold the AQUAvalve5 at eye level so that you can see the silicone fitted to the top float resting on the hole below it.
- The silicone must create a tight seal when touching the hole.
- If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the silicone, drop the float and hold at eye level again. Repeat the procedure if necessary.

#### Care and maintenance



The AQUAvalve5 is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.

At this point is it advisable to remove the silicones to avoid them being lost.

2 It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve5 nozzle, this will remove any lime scale build up that may have occurred during the growing season.

Blowing through the AQUAvalve5 nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve5 nozzle.

This will potentially damage the AQUAvalve5 beyond repair.

## Your GeoPot 4 System Setup Guidelines





#### GeoPot 4 System contents

- 1x 12.4 gal reservoir and lid
- 4x 1Pot XL tray and lid
- 4x 3 gal or 5 gal GeoPot
- 4x AOUAvalve5
- 5x 3/8" top hat grommet


12.4 gal

#### • 2x 3/8" in-line tap

- 2x 3/8" cross connector
- 4x 3/8" tee connector
- 13ft of 3/8" pipe

## · 4x PotSock Round

# **Suggested layouts** Layout 1 12.4 gal Layout 2

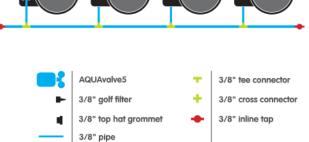

#### Advice

- Please note that multiple GeoPots may increase room humidity due to the exposed surfaces of the fabric pots.
- Pot up your plants, water through, then allow your plants to establish in the pots for a period of 7 to 10 days before turning your system on. This will encourage a stronger and healthier root system.
- Always raise your reservoir to a minimum of 6" above the highest AQUAvalve5 and re-fill the reservoir when there is approximately a 1/3 of the solution left - NEVER ALLOW THE RESERVOIR TO RUN EMPTY.
- With AQUAvalve5 systems mineral or organic fertilisers may be fed via the reservoir and pipework. Organic fertilisers will require a water pump in the reservoir running for 15 mins every 2 hrs and cleaning of the reservoir, pump, and filter each time the reservoir empties. Flush pipework with plain water every time the reservoir empties.
- Clean all substrate from the bottom and sides of the pots before placing in each tray. This will ensure your system is
- Always use free draining substrates, for example: soil/perlite, coco/perlite, soil/clay pebbles, coco/clay pebbles, rockwool/clay pebbles.

#### GeoPot 4 dimensions



Plan views

and options







GeoPot 4 System setup instructions



Fill GeoPot with medium and pot up plants.



Fit PotSock over the base of GeoPot

Water through pot and allow to drain outside the tray. Brush off debris.



From the outside of the module tray push the 3/8" top hat grommet into the hole in the module tray wall.



Thread approx 12" of 3/8" pipe into the tray through the grommet.

Wetting the pipe end will aid insertion.



Remove AQUAvalve collar Push 3/8" pipe through collar and attach to AOUAvalve nozzle

Rescrew collar - DON'T overturn... when you feel it grip STOP



Remove any slack in the 3/8" pipe by drawing excess out of the tray.



Align the 'half moon' section on the rear of the AQUAvalve with the 'T' section in the tray.

Firmly push the AOUAvalve onto the 'T'.



Cut 3/8" / 1/2" pipe to appropriate length



Push 3/8" top hat grommet into tank, then push 3/8" pipe through grommet.



Inside the tank push 3/8" filter into 3/8" pipe.



Place GeoPot in trav. Ensure NO FABRIC IS TOUCHING AQUAVALVE Place lid over valve onto tray.

Using your front instruction sheet, repeat the module set up instructions for the number of trays.

Allow your plants to establish for 7-10 days before turning system on